


BATTERY INSTALLATIONS AND OPERATING INSTRUCTIONS

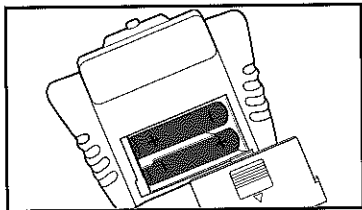


Battery Installation:

1. Remove battery compartment covers on vehicle and transmitter.
2. Install "AA" batteries in the battery compartments with positive (+) and negative (-) ends matching the compartment markings.
3. Replace the battery covers.

Operation:

1. **START:** Move switch on bottom of vehicle to the "ON" position.
2. **FORWARD/REVERSE:** Push forward/reverse joystick up to move vehicle forward and down for reverse.
3. **LEFT/RIGHT STEERING:** Push left/right joystick left to turn vehicle left or right to turn right.

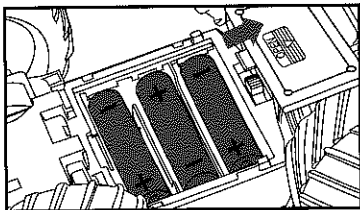

Battery Requirements:

Vehicle: 3 "AA" Batteries
Transmitter: 2 "AA" Batteries

For Best Results:

1. Do not mix old and new batteries.
2. Do not mix alkaline, standard or rechargeable batteries.
3. Use alkaline batteries only.

F.C.C. CAUTION:

The manufacturer is not responsible for radio interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.